



# User Manual

COPYRIGHT: The RNX 11197 operating instructions  
are owned by TWK-ELEKTRONIK GMBH and are  
protected by copyright laws and international treaty provisions.

© 2005 by TWK-ELEKTRONIK GMBH  
POB 10 50 63 ■ 40041 Düsseldorf ■ Germany  
Tel. +49/211 /63 20 67 ■ Fax +49/211 /63 77 05  
[info@twk.de](mailto:info@twk.de) ■ [www.twk.de](http://www.twk.de)

# Table of contents

<b>1. General .....</b>	<b>5</b>
<b>2. CANopen features of R Series encoders .....</b>	<b>5</b>
<b>3. Installation instructions .....</b>	<b>5</b>
3.1 Electrical connection .....	5
3.2 Baud rates and lead lengths .....	6
3.3 Setting the address and Baud rate.....	6
3.4 EDS file .....	6
<b>4. Process data exchange .....</b>	<b>7</b>
4.1 Operating modes.....	7
4.2 Data format.....	8
<b>5. Emergency messages.....</b>	<b>8</b>
<b>6. Programming and diagnosis (object directory).....</b>	<b>9</b>
6.1 Overview of the object directory .....	9
6.2 Communication parameters .....	10
6.2.1 Object 1000 <sub>n</sub> - Device type.....	10
6.2.2 Object 1001 <sub>n</sub> - Error register.....	10
6.2.3 Object 1005 <sub>n</sub> - COB-ID SYNC .....	10
6.2.4 Object 1008 <sub>n</sub> - Manufacturer device name .....	10
6.2.5 Object 1009 <sub>n</sub> - Manufacturer hardware version.....	10
6.2.6 Object 100A <sub>n</sub> - Manufacturer software version.....	10
6.2.7 Object 1010 <sub>n</sub> - Store parameters.....	11
6.2.8 Object 1011 <sub>n</sub> - Restore default parameters .....	11
6.2.9 Object 1014 <sub>n</sub> - COB-ID EMCY.....	11
6.2.10 Object 1017 <sub>n</sub> - Producer heartbeat time .....	11
6.2.11 Object 1018 <sub>n</sub> - Identity Object.....	11
6.2.12 Object 1800 <sub>n</sub> - First transmit PDO .....	12
6.2.13 Object 1801 <sub>n</sub> - Second transmit PDO.....	12
6.2.14 Object 1A00 <sub>n</sub> - First transmit PDO mapping.....	12
6.2.15 Object 1A01 <sub>n</sub> - Second transmit PDO mapping.....	12
6.3 Standardised device parameters.....	13
6.3.1 Object 6000 <sub>n</sub> - Operating parameters.....	13
6.3.2 Object 6001 <sub>n</sub> - Measuring units per revolution .....	13
6.3.3 Object 6002 <sub>n</sub> - Total measuring range .....	13
6.3.4 Object 6003 <sub>n</sub> - Preset value.....	13
6.3.5 Object 6004 <sub>n</sub> - Position value .....	13
6.3.6 Object 6200 <sub>n</sub> - Cyclic timer .....	13
6.4 Standardised device diagnosis.....	14
6.4.1 Object 6500 <sub>n</sub> - Operating status .....	14
6.4.2 Object 6501 <sub>n</sub> - Singleturn resolution.....	14

6.4.3 Object 6502 <sub>h</sub> - Number of distinguishable revolutions.....	14
6.4.4 Object 6503 <sub>h</sub> - Alarms.....	14
6.4.5 Object 6504 <sub>h</sub> - Supported alarms .....	14
6.4.6 Object 6506 <sub>h</sub> - Supported Warnings.....	15
6.4.7 Object 6507 <sub>h</sub> - Profile and software version .....	15
6.4.8 Object 6508 <sub>h</sub> - Operating time .....	15
6.4.9 Object 6509 <sub>h</sub> - Offset value .....	15
6.4.10 Object 650A <sub>h</sub> - Modul identification .....	15
6.4.11 Object 650B <sub>h</sub> - Serial number .....	15
6.5 Manufacturer-specific parameters.....	16
6.5.1 Object 2000 <sub>h</sub> - Node ID .....	16
6.5.2 Object 2001 <sub>h</sub> - Bit timing.....	16
<b>7. Examples.....</b>	<b>17</b>
7.1 Boot-up.....	17
7.2 Change parameter .....	17
7.3 Setting the node address via LSS.....	18
<b>8. Literature.....</b>	<b>19</b>

## 1. General

The electromagnetic R Series encoders are designed for direct connection to the CAN bus. This is achieved internally via the CAN bus controller T89C51 CC02 SO 28 (Atmel). The following specifications have been implemented:

Device Profile for Encoders

CiA Draft Standard 406, Version 3.0 /1/

CANopen Application Layer and Communication Profile

CiA Draft Standard 301, Version 4.02 /2/

The CANopen specifications can be obtained from the user organisation CiA ([www.can-cia.org](http://www.can-cia.org)).

The following R Series encoders with CANopen interface have been taken into consideration:

Model designation	Data sheet	Description
RNM/RNW	11397	Single-turn encoder

## 2. CANopen features of R Series encoders

- According to device profile DS 406, version 3.0, Device Profile for Encoders /1/
- NMT slave
- One SDO per communication direction for accessing the object directory
- Two transmit PDOs
- PDO identifier adjustable via SDO
- SYNC message
- EMERGENCY message
- Simple boot-up according to DS 301
- Transmission types can be set for all PDOs
- Node number and Baud rate setting via Layer Setting Service (LSS) /4/


## 3. Installation instructions

### 3.1 Electrical connection

CiA Draft Recommendation Proposal 303-1, Version 1.1.1 CANopen Cabling and Connector Pin Assignment /3/ must be adhered to when connecting the encoder. This particularly applies with regard to the terminal resistors, the lead characteristics, the length of the branch lines and the transmission length.

The bus terminal resistors must be implemented internally. The precise connector assignment is enclosed with each device.

Principle bus structure:

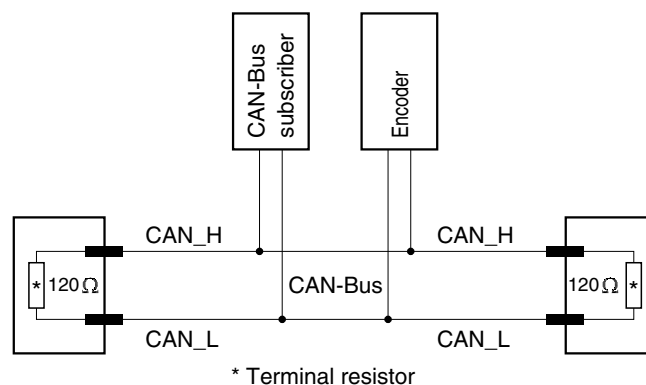

#### 3.2 Baud rates and lead lengths

Baud rate [kBaud]	20	50	125	250	500	800	1000
Lead length [m]	2500	1000	500	250	100	50	25

(According to CiA DS 301)

Note: The encoder has no galvanic separation between the supply voltage and bus leads; the total bus length is therefore limited to 200 m.

#### 3.3 Setting the address and Baud rate

The node address (node number) and the Baud rate are set via the LSS - Layer Setting Service (see CiA DS 305). In this case, each node has a unique LSS address, via which it can be identified in the network. This is comprised of the following:

Manufacturer ID:	<b>0000 010D<sub>n</sub></b>	(TWK manufacturer ID)
Product number:	<b>0000 2000<sub>n</sub></b>	(TWK product number)
Revision number:	<b>0001 0003<sub>n</sub></b>	(current revision number)
Serial number:	<b>xxxx xxxx<sub>n</sub></b>	(relevant serial number of the sensor)

See example in Chapter 7.3

In addition to the option of setting the node address and Baurate via the LSS, the parameters can also be changed via objects 2000<sub>n</sub> and 2001<sub>n</sub> (see manufacturer-specific object range, Chapter 6.5).

The default values are: Baud rate: **20 kBaud**  
Node address: **1**

#### 3.4 EDS file

The EDS file is enclosed on a diskette in order to integrate the sensor into a project planning tool. This file clearly and completely describes the characteristics of the CANopen subscriber in a defined format.

After integrating the EDS file into the project planning tool (e.g. CANsetter from Vektor-Informatik), the encoder's parameters can be comfortably set and diagnostic information can be read.

## 4. Process data exchange

In the case of CANopen, I/O data traffic takes place via the PDO (Process Data Object) message. The R-Series encoders provide two PDOs. Their transmission behaviour (transmission type) can be set independently of each other.

### 4.1 Operating modes

The following operating modes can be set:

#### Polling Mode (asynchronous-RTR):

The encoder transmits the current, actual position value, after the current position value has been polled via a „Remote Frame“ message by the master.

#### Asynchronous Mode (cyclic / acyclic):

Without being requested to do so by the master, the encoder transmits the current, actual position value following a value change and following the expiry of a cyclic time (cyclic timer > 0). The cycle time can be parameterised for values between 1 ms and 65,535 ms.

#### Synchronous Mode (synchronous-cyclic):

After receiving a SYNC message transmitted by a master, the encoder transmits the current, actual position value. The encoder's SYNC counter can be parameterised in such a way that the position value is only transmitted following a defined number of SYNC messages.

#### Acyclic Mode (synchronous-acyclic):

After receiving a SYNC message, the encoder only transmits the current, actual position value if the position value has changed since the last transmission.

In the case of CANopen, the operating modes (transmission types) and all other parameters are set via so-called SDOs (Service Data Object). The transmission types for PDO1 and PDO2 can be found under the indices 1800<sub>h</sub> and 1801<sub>h</sub>. (See Chapter 6.2)

The following Table shows the relevant values for the parameters transmission type.

Transmission Type					
Code	Transmission type				
	Cyclic	Acyclic	Synchron	Asynchronous	RTR
0		x	x		
1-240	x		x		
241-251	Reser				
252			x		x
253				x	x
254				x	
Meaning					
0	After SYNC, but only if the value has changed since the last SYNC.				
1-240	Transmit value after 1st or 240th SYNC message.				
252	Cycle Timer = 0	Position integration on SYNC; output of the stored position following request (Remote Frame).			
	Cycle Timer ≠ 0	Current position is transmitted in the timer's cycle. Position integration on SYNC; output of the stored position following request (Remote Frame) remains active.			
253	Cycle Timer = 0	Current position is transmitted upon request (Remote Frame).			
	Cycle Timer ≠ 0	Current position is transmitted in the timer's cycle. Current position is also transmitted following request (Remote Frame).			
254	Cycle Timer = 0	Data output occurs in the event of a position change. Current position is also transmitted following request (Remote Frame).			
	Cycle Timer ≠ 0	Current position is transmitted in the timer's cycle. Data output also occurs in the event of a position change. Current position is also transmitted following request (Remote Frame).			

## 4.2 Data format

The definition of the output data (mapping) and their depiction is identical for both PDOs. The position value is output in steps. The position value can also be called up in the object directory under the index 6004<sub>h</sub> - Position value. The position value is depicted in Intel format.

### Position value

Byte 0								Byte 1							
0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
12 Bit Position data												0	0	0	0

## 5. Emergency messages

Each time the internal error status register (Index 1001<sub>h</sub>) changes, the encoder transmits an emergency message with the identifier: 80<sub>h</sub> + node ID (even if an error which has occurred has been rectified).

An emergency message is comprised of 8 data bytes and is structured as follows:

Byte	0	1	2	3...7
Content	Error code		Error register (Index 1001 <sub>h</sub> )	Manufacturer-specific

See CANopen Specifications /2/ for error code.

The bits in the error register, index 1001<sub>h</sub>, (see Chapter 6.1), have the following meaning:

Bit	Meaning
0	General error
1-6	Not used
7	Manufacturer-specific error

In the case of an error, the error register always contains 81<sub>h</sub>. The cause of the error is then contained in index 6503<sub>h</sub>.

Bytes 3 and 4 of the emergency message reflect the content of the index 6503<sub>h</sub> (see Chapter 6.4.4) and may assume the following values:

Bit	Meaning	Error rectification
0-11	Not used	
12	EEPROM error	Re-programming an arbitrary parameter and saving with „save“, index 1010 <sub>h</sub> /01
13	EEPROM CRC error	Re-programming an arbitrary parameter and saving with „save“, index 1010 <sub>h</sub> /01
14	Not used	
15	Sensor error	Encoder voltage supply off/on



## 6. Programming and diagnosis (object directory)

In the case of CANopen, all parameters and diagnostic information are contained in the object directory. There, they may be changed and/or read with the SDO (Service Data Object) message, specifying their index and sub-index. The object directory is sub-divided into the following areas:

Communication parameters	Index 1000 <sub>h</sub> - 1FFF <sub>h</sub>
Manufacturer-specific parameters	Index 2000 <sub>h</sub> - 5FFF <sub>h</sub>
Standardised device parameters	Index 6000 <sub>h</sub> - 9FFF <sub>h</sub>

Refer to the following Table for a description of the individual parameters and the diagnostic information.

### 6.1 Overview of the object directory

Index	Object	Name	Data type	Access
<b>Communication Profile Area</b>				
1000 <sub>h</sub>	VAR	Device type	Unsigned32	ro
1001 <sub>h</sub>	VAR	Error register	Unsigned8	ro
1005 <sub>h</sub>	VAR	COB-ID-SYNC	Unsigned32	rw
1008 <sub>h</sub>	VAR	Manufacturer device name	String	ro
1009 <sub>h</sub>	VAR	Manufacturer hardware version	String	ro
100A <sub>h</sub>	VAR	Manufacturer software version	String	ro
1010 <sub>h</sub>	RECORD	Store parameters		rw
1011 <sub>h</sub>	RECORD	Restore default parameters		rw
1014 <sub>h</sub>	VAR	COB-ID-EMCY	Unsigned32	rw
1017 <sub>h</sub>	VAR	Producer heartbeat time	Unsigned16	rw
1018 <sub>h</sub>	RECORD	Identity object		ro
1800 <sub>h</sub>	RECORD	1. Transmit PDO		rw
1801 <sub>h</sub>	RECORD	2. Transmit PDO		rw
1A00 <sub>h</sub>	RECORD	PDO 1 Mapping		ro
1A01 <sub>h</sub>	RECORD	PDO 2 Mapping		ro
<b>Standardised Device Profile Area</b>				
6000 <sub>h</sub>	VAR	Operating parameters	Unsigned16	rw
6001 <sub>h</sub>	VAR	Measuring units per revolution	Unsigned32	ro
6002 <sub>h</sub>	VAR	Total measuring range in measuring units	Unsigned32	ro
6003 <sub>h</sub>	VAR	Preset value	Unsigned32	rw
6004 <sub>h</sub>	VAR	Position value	Unsigned32	ro
6200 <sub>h</sub>	VAR	Cyclic timer	Unsigned16	rw
6500 <sub>h</sub>	VAR	Operating status	Unsigned16	ro
6501 <sub>h</sub>	VAR	Single turn resolution	Unsigned32	ro
6502 <sub>h</sub>	VAR	Number of distinguishable revolutions	Unsigned16	ro
6503 <sub>h</sub>	VAR	Alarms	Unsigned16	ro
6504 <sub>h</sub>	VAR	Supported alarms	Unsigned16	ro
6506 <sub>h</sub>	VAR	Supported warnings	Unsigned16	ro
6507 <sub>h</sub>	VAR	Profile and software version	Unsigned32	ro
6508 <sub>h</sub>	VAR	Operating time	Unsigned32	ro
6509 <sub>h</sub>	VAR	Offset value	Unsigned32	ro
650A <sub>h</sub>	RECORD	Module identification		ro
650B <sub>h</sub>	VAR	Serial number	Unsigned32	ro
<b>Manufacturer Specific Profile Area</b>				
2000 <sub>h</sub>	VAR	Node ID	Unsigned8	rw
2001 <sub>h</sub>	VAR	Bit timing	Unsigned8	rw

## 6.2 Communication parameters

### 6.2.1 Object 1000<sub>h</sub> - Device type

Index	Sub	Name	Data type	Access	Range/Value	Default
1000 <sub>h</sub>	00	Device type	Unsigned32	ro		0x10196

### 6.2.2 Object 1001<sub>h</sub> - Error register

Index	Sub	Name	Data type	Access	Range/Value	Default
1001 <sub>h</sub>	00	Error register	Unsigned8	ro		

Bit	Meaning
0	General error
1-6	Not used
7	Manufacturer-specific error

The error register is the higher-level error register. Bit 0 and bit 7 are always set in the event of an error (81<sub>h</sub>). The cause of the error is then contained in index 6503<sub>h</sub>.

### 6.2.3 Object 1005<sub>h</sub> - COB-ID SYNC

Index	Sub	Name	Data type	Access	Range/Value	Default
1005 <sub>h</sub>	00	COB-ID SYNC	Unsigned32	rw	0 ... 0x7FF	0x80

Object 1005<sub>h</sub> defines the COB ID (11-bit identifier) for the Sync message.

### 6.2.4 Object 1008<sub>h</sub> - Manufacturer device name

Index	Sub	Name	Data type	Access	Range/Value	Default
1008 <sub>h</sub>	00	Manufacturer device name	String	ro		

Contains the manufacturer device name, e.g.: „Encoder RNM“

### 6.2.5 Object 1009<sub>h</sub> - Manufacturer hardware version

Index	Sub	Name	Data type	Access	Range/Value	Default
1009 <sub>h</sub>	00	Manufacturer hardware version	String	ro		

Contains the manufacturer hardware version e.g.: "P-0453"

### 6.2.6 Object 100A<sub>h</sub> - Manufacturer software version

Index	Sub	Name	Data type	Access	Range/Value	Default
100A <sub>h</sub>	00	Manufacturer software version	String	ro		

Contains the manufacturer software version, e.g.: „RNM Std“

**6.2.7 Object 1010<sub>h</sub> - Store parameters**

Index	Sub	Name	Data type	Access	Range/Value	Default
1010 <sub>h</sub>	00	Largest supported subindex	Unsigned8	ro	1	
	01	Password	Unsigned32	rw	„save“	0

Writing „save“ (in hex: 73 61 76 65) in sub-index 01 saves the current parameters in the encoder's EEPROM, where they are protected against zero-voltage.

**6.2.8 Object 1011<sub>h</sub> - Restore default parameters**

Index	Sub	Name	Data type	Access	Range/Value	Default
1011 <sub>h</sub>	00	Largest supported subindex	Unsigned8	ro	1	
	01	Password	Unsigned32	rw	„load“	0

Writing „load“ (in hex: 6C 6F 61 64) in sub-index 01 loads the parameter's default values and saves them in the encoder's EEPROM, where they are protected against zero-voltage.

**6.2.9 Object 1014<sub>h</sub> - COB-ID EMCY**

Index	Sub	Name	Data type	Access	Range/Value	Default
1014 <sub>h</sub>	00	COB-ID EMCY	Unsigned32	rw	0 ... 0x7FF	0x80 + Node-ID

Identifier for the emergency message, which the encoder transmits on occurrence of an alarm.

In default status, this has the value 0x80 + node address. If the object is written, the node address is no longer added. The default status can be restored via „load default“ (object 1011<sub>h</sub>).

**6.2.10 Object 1017<sub>h</sub> - Producer heartbeat time**

Index	Sub	Name	Data type	Access	Range/Value	Default
1017 <sub>h</sub>	00	Producer heartbeat time	Unsigned16	rw	0 ... 65535	0

If the value is > 0, the heartbeat message is transmitted on the identifier guard COB ID + node ID in the heartbeat time interval in ms.

**6.2.11 Object 1018<sub>h</sub> - Identity Object**

Index	Sub	Name	Data type	Access	Range/Value	Default
1018 <sub>h</sub>	00	Largest supported subindex	Unsigned8	ro	4	
	01	Manufacturer ID	Unsigned32	ro	0x10D	
	02	Product ID	Unsigned32	ro	0x2000	
	03	Revision No.	Unsigned32	ro	0x1 0003	
	04	Serial No.	Unsigned32	ro	0XXXXX XXXX	

The information in object 1018<sub>h</sub> (also see Chapter 3.3) is required to use the Layer Setting Service (LSS, /4/).

**6.2.12 Object 1800<sub>h</sub> - First transmit PDO**

Index	Sub	Name	Data type	Access	Range/Value	Default
1800 <sub>h</sub>	00	Largest supported subindex	Unsigned8	ro	3	
	01	COB-ID	Unsigned32	rw	0 ... 0x7FF	0x180 + Node-ID
	02	Transmission type	Unsigned8	rw	252,253,254	253
	03	Inhibit time	Unsigned16	rw	0 ... 65535	0

Object 1800<sub>h</sub> defines the first PDO's communication data. Only transmission types 252,253,254 are supported.

Sub-index 01 (COB ID) contains the identifier for PDO1.

In default status, this has the value 0x180 + node address. If the object is written, the node address is no longer added. The default status can be restored via „load default“ (object 1011<sub>h</sub>).

The inhibit time (ms) is the time before the PDO is permitted to be transmitted again.

(See operating modes in Chapter 4.1)

**6.2.13 Object 1801<sub>h</sub> - Second transmit PDO**

Index	Sub	Name	Data type	Access	Range/Value	Default
1801 <sub>h</sub>	00	Largest supported subindex	Unsigned8	ro	2	
	01	COB-ID	Unsigned32	rw	0 ... 0x7FF	0x280 + Node-ID
	02	Transmission type	Unsigned8	rw	0 ... 240	1

Object 1801<sub>h</sub> defines the second PDO's communication data. Only transmission types 0... 240 are supported.

Sub-index 01 (COB ID) contains the identifier for PDO2.

In default status, this has the value 0x280 + node address. If the object is written, the node address is no longer added. The default status can be restored via „load default“ (object 1011<sub>h</sub>).

(See operating modes in Chapter 4.1)

**6.2.14 Object 1A00<sub>h</sub> - First transmit PDO mapping**

Index	Sub	Name	Data type	Access	Range/Value	Default
1A00 <sub>h</sub>	00	Largest supported subindex	Unsigned8	ro	1	
	01	First mapping object	Unsigned32	ro	0x6004 0010	

(see Chapter 4.2)

**6.2.15 Object 1A01<sub>h</sub> - Second transmit PDO mapping**

Index	Sub	Name	Data type	Access	Range/Value	Default
1A01 <sub>h</sub>	00	Largest supported subindex	Unsigned8	ro	1	
	01	First mapping object	Unsigned32	ro	0x6004 0010	

(see Chapter 4.2)

### 6.3 Standardised device parameters

#### 6.3.1 Object 6000<sub>h</sub> - Operating parameters

Index	Sub	Name	Data type	Access	Range/Value	Default
6000 <sub>h</sub>	00	Operating parameters	Unsigned16	rw		0

The following Table contains an overview of operating parameters for the encoder. Before scaling the encoder via object 6003<sub>h</sub>, the „Scaling function control“ bit must be set to „1“.

Bit	Name	0	1
0	Code sense	CW	CCW
1	Not used		
2	Scaling function control	disabled	enabled
3 - 15	Not used		

#### 6.3.2 Object 6001<sub>h</sub> - Measuring units per revolution

Index	Sub	Name	Data type	Access	Range/Value	Default
6001 <sub>h</sub>	00	Measuring units per revolution	Unsigned32	ro	4096	

Resolution per revolution in steps.

#### 6.3.3 Object 6002<sub>h</sub> - Total measuring range

Index	Sub	Name	Data type	Access	Range/Value	Default
6002 <sub>h</sub>	00	Total measuring range	Unsigned32	ro	4096	

Total measuring range in steps.

#### 6.3.4 Object 6003<sub>h</sub> - Preset value

Index	Sub	Name	Data type	Access	Range/Value	Default
6003 <sub>h</sub>	00	Preset value	Unsigned32	rw	0 ... Total measuring range -1	0

The preset value is displayed as the position value if object 6003<sub>h</sub> is written and the „Scaling function control“ bit (object 6000<sub>h</sub>) is enabled. The preset is saved in the EEPROM.

#### 6.3.5 Object 6004<sub>h</sub> - Position value

Index	Sub	Name	Data type	Access	Range/Value	Default
6004 <sub>h</sub>	00	Position value	Unsigned32	ro	0 ... Total measuring range -1	

This value is the position value, and is output via the PDOs (see Chapter 4).

#### 6.3.6 Object 6200<sub>h</sub> - Cyclic timer

Index	Sub	Name	Data type	Access	Range/Value	Default
6200 <sub>h</sub>	00	Cyclic timer	Unsigned16	rw	0 ... 65535	0

In the case of values of > 0 ms for the cyclic timer, the position value (or position and speed value) is transmitted cyclically with PDO 1 (see Chapter 4).

## 6.4 Standardised device diagnosis

### 6.4.1 Object 6500<sub>h</sub> - Operating status

Index	Sub	Name	Data type	Access	Range/Value	Default
6500 <sub>h</sub>	00	Operating status	Unsigned16	ro		

Object 6500<sub>h</sub> represents the encoder's operating status (also see object 6000<sub>h</sub>).

### 6.4.2 Object 6501<sub>h</sub> - Singleturn resolution

Index	Sub	Name	Data type	Access	Range/Value	Default
6501 <sub>h</sub>	00	Singleturn resolution	Unsigned32	ro	4096 (8192)	

The maximum setable resolution.

### 6.4.3 Object 6502<sub>h</sub> - Number of distinguishable revolutions

Index	Sub	Name	Data type	Access	Range/Value	Default
6502 <sub>h</sub>	00	Number of distinguishable revolutions	Unsigned16	ro	1	

Number of revolutions before the output value goes back to zero again.

### 6.4.4 Object 6503<sub>h</sub> - Alarms

Index	Sub	Name	Data type	Access	Range/Value	Default
6503 <sub>h</sub>	00	Alarms	Unsigned16	ro		

On occurrence of an error, an emergency message is transmitted, and the encoder switches to pre-operational status (see Chapter 5). The following Table shows the possible errors:

Bit	Meaning	Error rectification
0-11	Not used	
12	EEPROM error	Re-programming an arbitrary parameter and saving with „save“, index 1010 <sub>h</sub> /01
13	EEPROM CRC error	Re-programming an arbitrary parameter and saving with „save“, index 1010 <sub>h</sub> /01
14	Not used	
15	Sensor error	Encoder voltage supply off/on

### 6.4.5 Object 6504<sub>h</sub> - Supported alarms

Index	Sub	Name	Data type	Access	Range/Value	Default
6504 <sub>h</sub>	00	Supported alarms	Unsigned16	ro	0xB000	

Only the alarms listed under object 6503<sub>h</sub> are supported.

**6.4.6 Object 6506<sub>h</sub> - Supported Warnings**

Index	Sub	Name	Data type	Access	Range/Value	Default
6506 <sub>h</sub>	00	Supported warnings	Unsigned16	ro	0	

No warnings are supported.

**6.4.7 Object 6507<sub>h</sub> - Profile and software version**

Index	Sub	Name	Data type	Access	Range/Value	Default
6507 <sub>h</sub>	00	Profile and software version	Unsigned32	ro		

Version of the encoder profile which is implemented and encoder software version. The version numbers are each BCD-encoded byte-by-byte.

Profile Version		Software Version	
Byte 0	Byte 1	Byte 2	Byte 3
Bit 7 - 0	Bit 15 - 8	Bit 7 - 0	Bit 15 - 8

**6.4.8 Object 6508<sub>h</sub> - Operating time**

Index	Sub	Name	Data type	Access	Range/Value	Default
6508 <sub>h</sub>	00	Operating time	Unsigned32	ro	0xFFFF FFFF	

Not supported at present.

**6.4.9 Object 6509<sub>h</sub> - Offset value**

Index	Sub	Name	Data type	Access	Range/Value	Default
6509 <sub>h</sub>	00	Offset value	Unsigned32	ro		

Internal calculation value.

**6.4.10 Object 650A<sub>h</sub> - Modul identification**

Index	Sub	Name	Data type	Access	Range/Value	Default
650A <sub>h</sub>	00	Largest supported subindex	Unsigned8	ro	1	
	01	Offset value	Unsigned32	ro	0	

Not supported at present.

**6.4.11 Object 650B<sub>h</sub> - Serial number**

Index	Sub	Name	Data type	Access	Range/Value	Default
650B <sub>h</sub>	00	Serial number	Unsigned32	ro		

The object contains the device's serial number.

## 6.5 Manufacturer-specific parameters

### 6.5.1 Object 2000<sub>h</sub> - Node ID

Index	Sub	Name	Data type	Access	Range/Value	Default
2000 <sub>h</sub>	00	Node-ID	Unsigned8	rw	1 ... 127	1

The sensor's node address. After setting the node address via index 2000<sub>h</sub>, this must be permanently saved in the EEPROM via index 1010<sub>h</sub>. It only comes into effect following power off/on or a reset.

This object can also be changed via the Layer Setting Service (see Chapter 3.3).

### 6.5.2 Object 2001<sub>h</sub> - Bit timing

Index	Sub	Name	Data type	Access	Range/Value	Default
2001 <sub>h</sub>	00	Bit timing	Unsigned8	rw	0 ... 7	7

The sensor's Baud rate can be set via this index. After setting the Baud rate via index 2001<sub>h</sub>, this must be permanently saved in the EEPROM via index 1010<sub>h</sub>. It only comes into effect following power off/on or a reset.

This object can also be changed via the Layer Setting Service (see Chapter 3.3).

The Baud rate is set according to the following Table:

Baud rate [kBit/s]	Bit timing value
1000	00 <sub>h</sub>
800	01 <sub>h</sub>
500	02 <sub>h</sub>
250	03 <sub>h</sub>
125	04 <sub>h</sub>
125	05 <sub>h</sub>
50	06 <sub>h</sub>
20	07 <sub>h</sub>



## 7. Examples

Message traffic between a master and the RNM/RXW encoder during boot-up, when changing a parameter and when setting the slave address with LSS is shown in the following. The identifier (ID), the transmission direction (Rx/Tx), the Data Length Code (DLC) and the data bytes are shown in tabular form.

The following applies:

- The encoder has the address 1 (default) and is the only slave
- Encoder with default parameter values
- Tx: Master transmits data to the encoder
- Rx: Encoder transmits data

### 7.1 Boot-up

The following Table shows encoder boot-up, from switching on the supply voltage to initial transmission of the position value. The position value is subsequently polled via a Sync command.

Action	Id	Rx/Tx	DLC	Databytes								Remark
				00	01	02	03	04	05	06	07	
Bus active, encoder in the bus with node address 1												
Voltage off -> on	701	Rx	1	00								Boot up node 1
Start all nodes	0	Tx	2	1	0							Operational for all nodes
	181	Rx	2	xx LSB	xx MSB							Response from RNM (PDO1)
Master (user) transmits a Sync												
Sync from the master	80	Tx	0									
	281	Rx	2	xx LSB	xx MSB							Response from RNM (PDO2)

All values in hex!

### 7.2 Change parameter

Here the changing of the code sense by the parameter "Operating parameters" Index 6000<sub>h</sub> is shown. Afterwards the parameters are saved in the encoders EEPROM.

Action	Id	Rx/Tx	DLC	Databytes								Remark
				00	01	02	03	04	05	06	07	
Write 0x0001	601	Tx	8	23	00	60	00	01	00	00	00	
	581	Rx	8	60	00	60	00	00	00	00	00	Response from RNM
Save parameters	601	Tx	8	23	10	10	01	73	61	76	65	"save"
	581	Rx	8	60	10	10	01	00	00	00	00	Response from RNM

All values in hex!

### 7.3 Setting the node address via LSS

In the case of the LSS /4/, either all CANopen subscribers are addressed via a global command or an individual subscriber is addressed via its LSS address, which is comprised of the manufacturer name, the product name, the revision number and the serial number (see Chapter 3.3).

In the following example, the sensor is addressed via its LSS address (i.e. is switched from LSS-Operation-Mode to LSS-Configuration-Mode), node address 2 is programmed and saved. LSS-Operation-Mode is subsequently reset. The sensor then reboots and logs on (without voltage off/on) with its boot-up protocol. It is now ready to operate with its new address.

To do this, a switch first has to be made to stop status and the heartbeat timer has to be deactivated, i.e. heartbeat time=0 (default status).

**Attention:** During LSS-programming the Heartbeat-Time (Index 1017<sub>h</sub>) has to be zero (default status).

Aktion	Id	Rx/Tx	DLC	Databytes								Comment
				00	01	02	03	04	05	06	07	
Stop Node	0	Tx	2	02	00							Stop node for all nodes
LSS-Switch Mode Selective	7E5	Tx	8	40	0D	01	00	00	00	00	00	1. Transmission of the manufacturer name
LSS-Switch Mode Selective	7E5	Tx	8	41	00	60	00	00	00	00	00	2. Transmission of the product number
LSS-Switch Mode Selective	7E5	Tx	8	42	03	00	01	00	00	00	00	3. Transmission of the revision number
LSS-Switch Mode Selective	7E5	Tx	8	43	66	BE	02	00	00	00	00	4. Transmission of the serial number (in this case: 179814)
	7E4	Rx	8	44	00	00	00	00	00	00	00	Success message from the sensor, which is now in LSS Configuration-Mode
LSS-Configure Modul ID	7E5	Tx	8	11	02	00	00	00	00	00	00	Node address 2 programming
	7E4	Rx	8	11	00	00	00	00	00	00	00	Success message from the sensor
LSS-Store Configuration	7E5	Tx	8	17	00	00	00	00	00	00	00	Zero-voltage-protected saving
	7E4	Rx	8	17	00	00	00	00	00	00	00	Success message from the sensor
LSS-Switch Mode Global: Operation Mode	7E5	Tx	8	04	00	00	00	00	00	00	00	Sensor is reset to LSS-Operation-Mode
	702	Rx	1	00								Boot-up node with new node address

All values in hex!

## 8. Literature

- /1/      CiA Draft Standard 406, Version 3.0, Device Profile for Encoders
- /2/      CiA Draft Standard 301, Version 4.02, CANopen Application Layer and Communication Profile
- /3/      CiA Draft Recommendation Proposal 303-1, Version 1.1.1 CANopen Cabling and Connector Pin Assignment
- /4/      CiA Draft Standard Proposal 305, Version 1.1.1, CANopen Layer Setting Services and Protocol (LSS)